
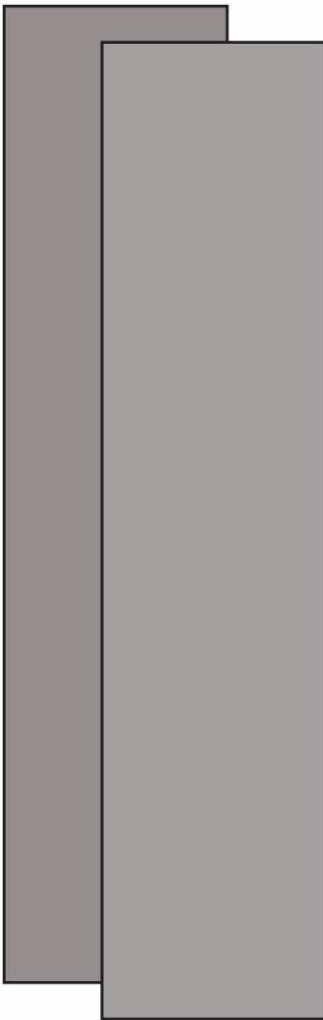



4" Tassel Frame

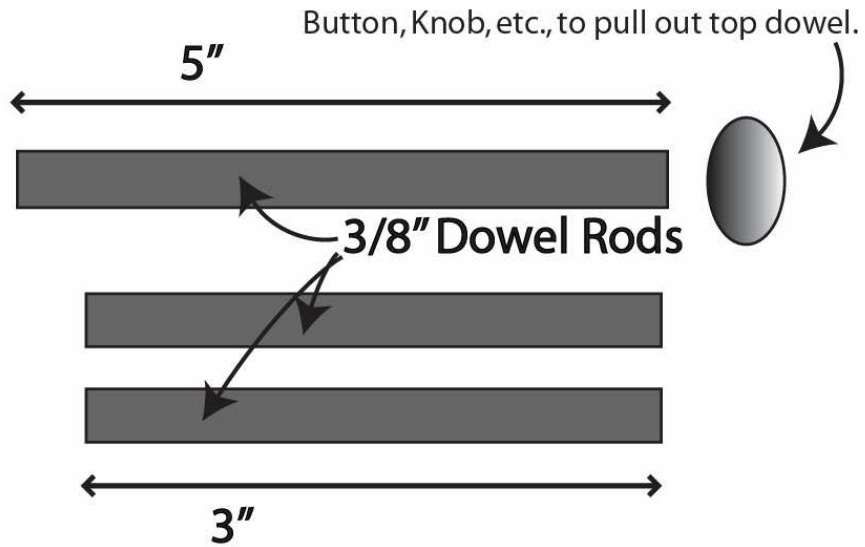

Drill one 3/8" hole
11/16" from top
edge and 3/4" from
sides (centered) on
both left and right
side boards.

1 1/2" wide

Drill two 3/8" holes
11/16" from the
bottom edge and
7/16" from sides
on both left and
right side boards.

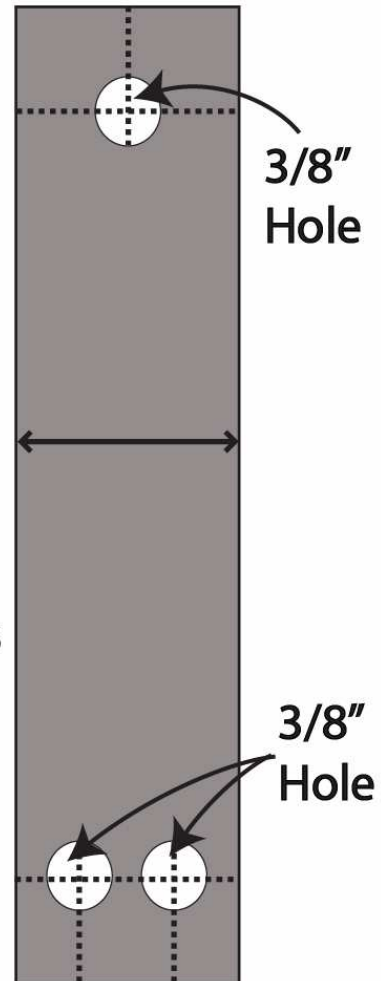

Glue knob to end of top dowel rod. Insert top dowel rod. DO NOT GLUE TOP DOWEL ROD IN PLACE. The top dowel rod must be removable. Insert and glue bottom dowel rods in place.

