
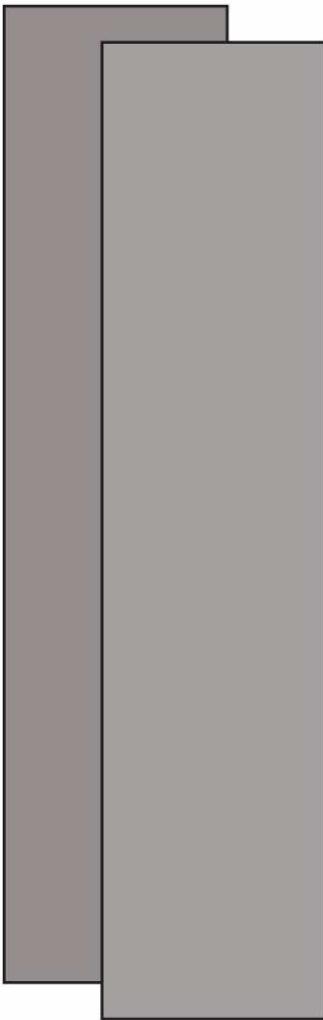



# 4" Tassel Frame

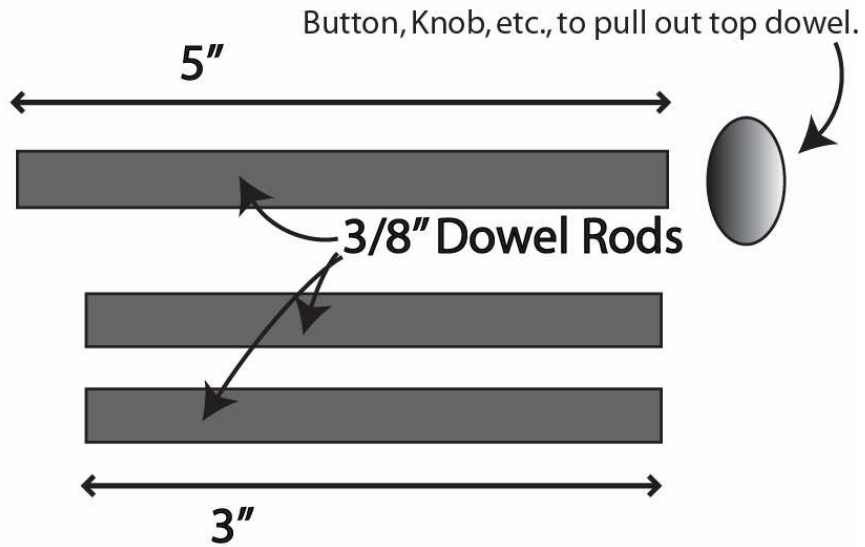

Drill one 3/8" hole  
11/16" from top  
edge and 3/4" from  
sides (centered) on  
both left and right  
side boards.

1 1/2" wide

Drill two 3/8" holes  
11/16" from the  
bottom edge and  
7/16" from sides  
on both left and  
right side boards.

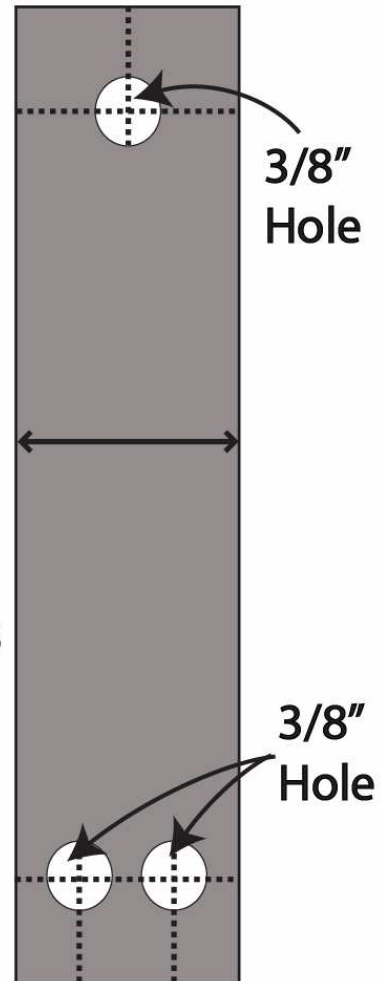

Glue knob to end of top dowel rod. Insert top dowel rod. DO NOT GLUE TOP DOWEL ROD IN PLACE. The top dowel rod must be removable. Insert and glue bottom dowel rods in place.

